

Technical Data Sheet

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

CE

CO₂ transmitter


CO 112

KEY POINTS

- Range from 0 to 5000 ppm
- 0-10 V active output, power supply 24 Vac/Vdc (3-4 wires) or 4-20 mA output, passive loop, power supply from 16 to 30 Vdc (2 wires)
- ABS V0 housing, IP65 (depending on model), with or without display
- "1/4 turn" system mounting with wall-mount plate
- Housing with simplified mounting system



FEATURES OF HOUSING

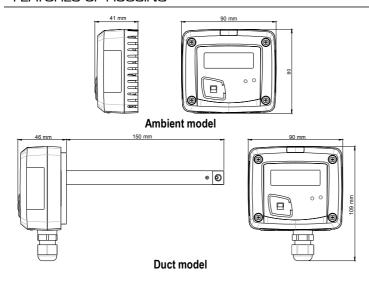

Material: ABS V0

Protection:

- duct model : IP65 - ambient model : IP20

Display: LCD 10 digits. Size: 50 x 17 mm

Height of digits: Value: 10 mm; Unit: 5 mm

Cable gland (only for duct model): for cables Ø 8 mm

maximum


Weight: 138 g (ambient model); 150 g (duct model)

TECHNICAL FEATURES

Unit of measurement	ppm
Measuring range	From 0 to 5000 ppm
Accuracy*	±3 of reading or ±50 ppm
Type of sensor	Electrochemical sensor
Response time	T63 = 30 s
Resolution	1 ppm
Type of fluid	Air and neutral gas
Working temperature	From 0 to +50 °C
Storage temperature	From -10 to +70 °C

^{*}All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation

PART NUMBER

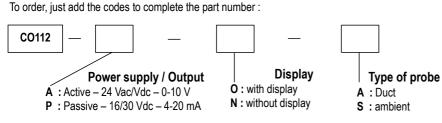


Example: CO112-POA

CO₂ transmitter, 4-20 mA passive transmitter, with display and duct probe

TECHNICAL SPECIFICATIONS

Output / Power supply	- active 0-10 V (power supply 24 Vac/Vdc ± 10%), 3-4 wires - passive loop 4-20 mA (power supply 16/30 Vdc), 2 wires - maximum load : 500 Ohms (4-20 mA) - minimum load : 1 K Ohms (0-10 V)
Consumption	2 VA (0-10 V) or max. 22 mA (4-20 mA)
Electro-magnetical compatibility	EN61326
Electrical connection	Screw terminal block for cables Ø0.05 to 2.5 mm²
Communication to PC	Kimo USB-mini Din cable
Environment	Air and neutral gas

CONNECTIONS

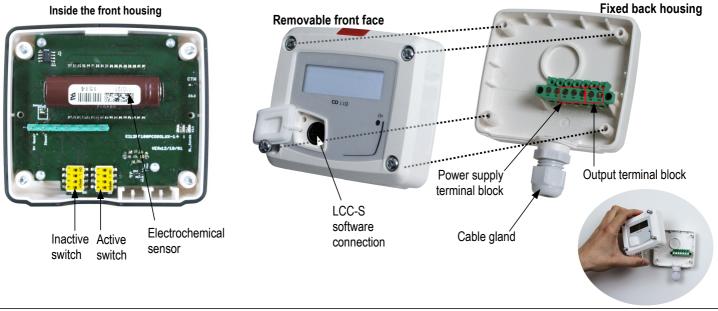



ELECTRICAL CONNECTIONS - as per NFC15-100 standard




This connection must be made by a qualified technician. To make the connection, the transmitter must not be energized.


For CO112-A models with 0-10 V output - active:

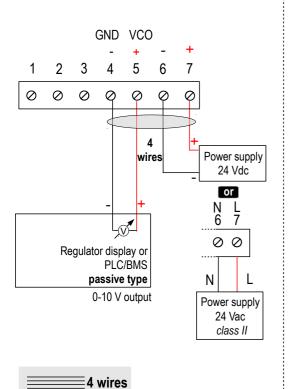

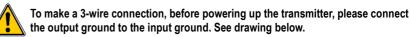

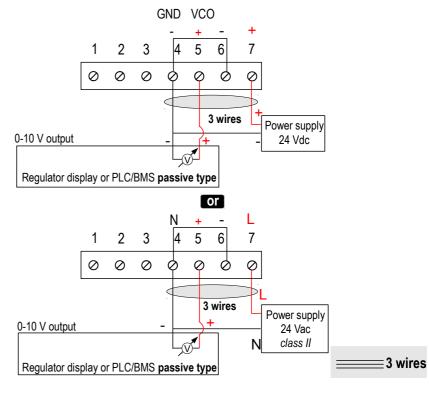

For CO112-P models with 4-20 mA output - passive :

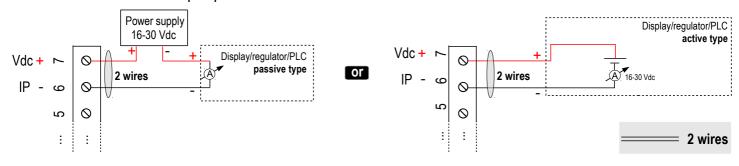


SETTINGS AND USE OF THE TRANSMITTER

Configuration




To configure the transmitter, it must not be energized. Then you can make the required settings thanks to the DIP switches as shown on the drawing below. When the transmitter is configured, you can power it up.

To configure the transmitter, unscrew the 4 screws of the housing then open it. DIP switches allowing the different settings are accessible.

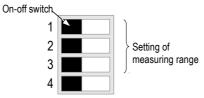

Measuring range setting

To set a measuring range, put the on-off switches 2, 3 and 4 as shown below:

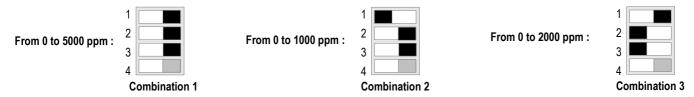

CONFIGURATION VIA LCC-S SOFTWARE (optional)

An easy and friendly configuration with the software!

It is possible to configure intermediary ranges.

Attention: the minimum difference between the minimum scale and the maximum scale is 20.

Example : for a 0-5000 ppm transmitter, the minimum delta is 20 ppm. So the transmitter could be configure from 0 to 70 ppm from 0 to 20 ppm.

- To access to the configuration via software :
 - Set the switch as shown beside.
 - Connect the cable of the LCC-S to the connection of the transmitter.
- To configure the transmitter, please refer to the LCC-S user manual.


Caution: The configuration of the parameters can be done either by DIP switch, or by software (you cannot combine both solutions).

1

2

3

Switch 1

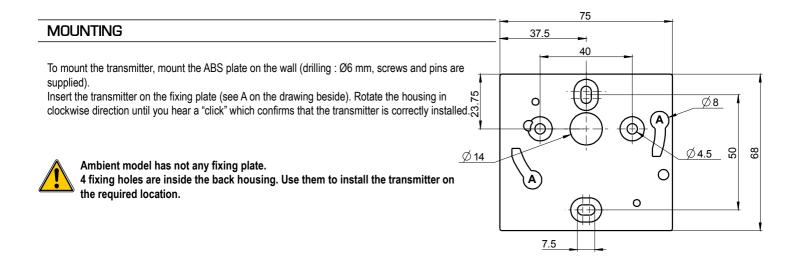

Flang - transmitter_C0112 - 08/03/13 - RCS (24) Périgueux 349 282 095 Non-contractual document - We reserve the right to modify the characteristics of our products without prior notice.

MAINTENANCE

Please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formol, that may be used for cleaning rooms or ducts.

OPTIONS AND ACCESSORIES

- KIAL-100A: Power supply class 2, 230 Vac input, 24 Vac output
- LCC-S : configuration software with USB cable

www.kimo.fr

Distributed by:



e-mail: export@kimo.fr