



# XT400 SERIES BUILT TOUGH TO DO BUSINESS BETTER

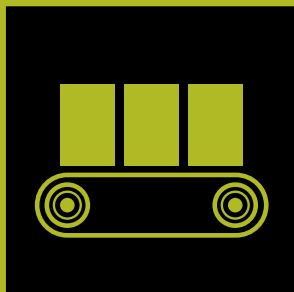

**ON-SITE TWO-WAY BUSINESS RADIOS  
AND ACCESSORIES**

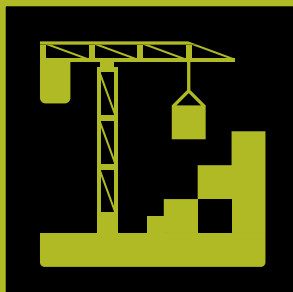

# WORK TOGETHER BETTER WITH A FASTER WAY TO COMMUNICATE

You need to communicate quickly without missing a beat – whether you're coordinating resources at the construction site, managing maintenance technicians in an office complex or monitoring resources on the manufacturing line. The XT400 Series two-way radios have the business smarts to help your teams work better together.

These fully-featured radios combine outstanding quality with excellent affordability to give your operation the competitive edge. With crisp, clear audio throughout the workplace and exceptional durability, XT400 Series radios deliver great performance even with hard use in high noise and harsh conditions.

## OUTLAST HARSH CONDITIONS AND HARD USE

XT400 Series radios undergo Motorola's unique and gruelling Accelerated Life Testing (ALT) that simulates up to 5 years of field use.

### BLOWING RAIN

Steady rainfall and wind for 30 minutes on every surface

### VIBRATION

Up to nine hours of exposure to vibration that simulates the rigors that a radio could undergo while being carried or transported

### SALT FOG

48 hours of exposure

### BLOWING DUST

Six hours of blowing dust on all surfaces

### SHOCK

18 shocks with a minimum G force of 40 G each

### TEMPERATURE

Multiple hours of exposure to storage temperatures as low as -55° C and as high as 70° C

## IMPORTANT FEATURES HELP YOUR WORKFORCE

### COMMUNICATE CLEARLY

XT400 Series delivers **loud and clear** audio output thanks to its tightly specified RF performance and built-in 1500mW loudspeaker with wind-noise reduction. The user can select between 8 channels and 219 privacy codes to help ensure a clear signal.

### INTERACT EASILY

**Customised channel announcements** tell you which channel you're on when you change it. So you can concentrate on serving customers, not removing the radio from a belt to see the channel. Designate 16 pre-recorded channel names that fit your departments, such as customer service, security, maintenance and more.


The **carry holster** with a swivel clip lets you rotate the XT400 Series radio into a comfortable position. Move freely as you bend to pick up a tool or reach to restock a shelf.

### CONNECT CONVENIENTLY

Put the XT400 Series radios in **voice-activated (VOX)** mode (with or without an audio accessory) and converse hands-free without physically pressing the push-to-talk (PTT) button. Now you can multi-task, check in a guest and call customer service to assist at the front desk.

An **antimicrobial coating** helps prevent the growth of mould and germs on the surface of the radio. As workers change shifts, they can pass on radios confidently.

# ALL THE RIGHT PROFESSIONAL CREDENTIALS

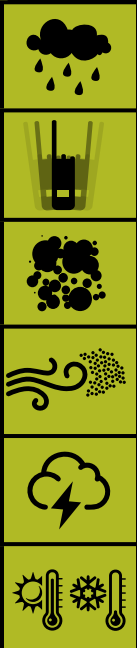

FEATURE:	FUNCTION:
EXCEPTIONALLY CLEAR AUDIO	Powerful speaker delivers premium-quality audio for clear communications in noisy conditions.
CONTINUOUS COVERAGE*	Communicate confidently in a workplace up to 16 250 m <sup>2</sup> , 13 floors or 9km line of sight.
ERGONOMIC DESIGN	Comfortable to wear all-day, with easy-to-use interface that requires little or no training.
DURABLE, WATER-RESISTANT	Takes on tough conditions with a durable metal diecast chassis that meets US Military Standard 810 and IP55 specs.
ANTIMICROBIAL PROTECTION**	Helps prevent the growth of mould and germs on the surface of the radio.
TRI-COLOURED LED	Easily identify different radio features and radio status with the bright tri-coloured LED.
CHANNELS	To talk with different workgroups quickly, change channels at the touch of a button or with the channel selector knob.
CHANNEL ALIAS	Assign each channel a user defined name (Available on XT460). For non-display models, use channel announcement to confirm which channel you are on.
ADVANCED VOICE ACTIVATION (VOX)	Enjoy the convenience of hands-free operation with our optional accessories.
CONVENIENT CHARGING	Drop-in charger keeps radios charged, ready and centrally located. LED light on multi-unit charger provides a charge status to give you confidence you're heading out with a fully-charged radio.
EASY TO PROGRAMME***	HTML-based Customer Programming Software works with any computer web browser. Profiles are interchangeable with XTNi Series.
VOICE PROMPTS	Programme XT400 Series non-display radios on the go. Confirm the changes even without a radio display so you continue working without distraction.
EASY CLONING	Quickly copy settings between XT400 Series or XTNi and XT400 Series radios with the optional radio-to-radio cloning cable or Mult-Unit Charger.
LICENSE-FREE PMR446 FREQUENCIES	Operates without subscription or call charges on PMR446 unlicensed frequencies, offering 8 channels and user selectable PL codes to help ensure a clear signal.
SEAMLESS XTNi SERIES TRANSITION	XT400 series radios are compatible with all XTNi series radios. They share the same frequencies and programming profiles are interchangeable.

\* Coverage will vary based on terrain and conditions.

\*\* Does not apply to accessories.

\*\*\* CPS is available as a free download. Compatible with Windows® XP, Vista and 7. Separate USB cable required.



## CHOOSE THE RIGHT XT400 SERIES RADIO TO MEET YOUR BUSINESS NEEDS




# TESTED TO LAST IN TOUGH CONDITIONS

Military Standard 810 C, D, E, F and G plus IP55 may be the standards for other radio manufacturers, but they are the starting point for our XT400 Series. These radios undergo Motorola's unique Accelerated Life Testing (ALT). This rigorous laboratory testing simulates up to 5 years of field use. We design and build the XT400 Series right the first time to minimize costly repairs and downtime.



## HIGH-POWERED ACCESSORIES WORK OVERTIME

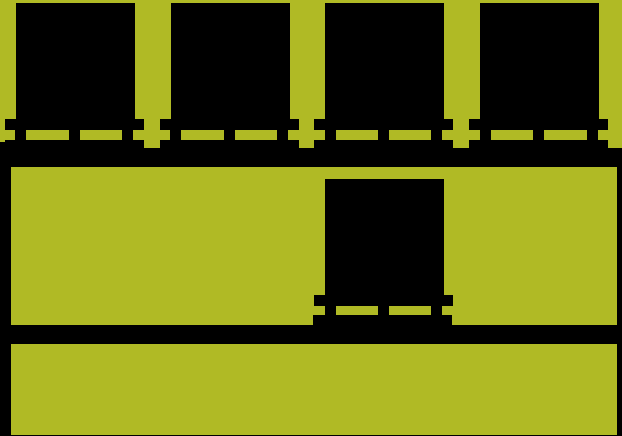

### AUDIO SOLUTIONS

Pair the XT400 Series radio with an audio accessory to communicate productively. A Remote Speaker Microphone and range of earpieces allow you to hear clearly and work hands free. Our innovative accessories fit your active workstyle and attire, too.

### CARRY SOLUTIONS

Have the freedom to wear the XT400 Series radio your way. A holster with swivel clip lets you move easily so you can wear the radio at the angle you prefer. Bend, reach or sit without the radio getting in the way.

### CONNECTIVITY SOLUTIONS

Manage your radios and your time by cloning all programming and menu settings at the touch of a button with the radio-to-radio cloning cable or clone radios in your Multi-Unit Charger. Use the CPS programming cable to quickly connect to software to Programme a variety of functions.

### BATTERY AND CHARGING SOLUTIONS

Our rechargeable lithium ion batteries with battery life of up to 20 hours are lightweight and support long work days. A Multi-Unit Charger with LED battery status light lets you charge up to six radios simultaneously. This charger is smart and speeds up charging times when there are less than 6 radios in it.

For more information on the radio that's built tough to do business better, visit the Motorola XT400 Series website at [www.motorolasolutions.com/XTseries](http://www.motorolasolutions.com/XTseries) or find your closest Motorola representative or authorised Partner at [www.motorolasolutions.com/contactus](http://www.motorolasolutions.com/contactus)

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2013 Motorola Solutions, Inc. All rights reserved.

Motorola Solutions Ltd. Jays Close, Viabes Industrial Estate, Basingstoke, Hampshire, RG22 4PD, UK  
Version 1 (06/13)



Distributed by:

