

CSL SIGNAL ANALYSER

The Perfect Signal For Your Connected Device



CSL Signal Analyser is intended to be used to identify the optimum location for your connected device prior to installation.

Designed to relay accurate and essential data, to ensure the best installation every time. It measures and displays radio signal strength and is available in 2G and 4G versions.


Information is fed back to the device, including the network provider, radio technology, signal quality and signal strength. No SIM is required to perform network surveys which you can also save for future reference.

CSL Signal Analyser is ideal to use for alarm signalling, 4G routers, deploying parking meters/smart meters, telehealth products and more.

- Ideal for deploying any mobile application
- Live monitor function to find the optimum installation location (SIM required for 4G)
- 4G versions are backwards compatible (2G/3G/4G)
- Rechargeable battery with up to 20 hours life
- Multilingual - 10 languages
- Download survey results and live monitor results via USB
- Rain resistant material and durable protective case provided
- Automatic power down when not in use
- Firmware upgradeable



CHOOSE CSL SIGNAL ANALYSER FOR

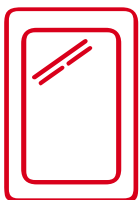


Touch Screen
Full colour with a handy dashboard menu



Quick Survey Button
Run a survey in just one click to receive both the basic & advanced result readings



2G or 4G Versions
4G version can be used for 2G/3G/4G surveys

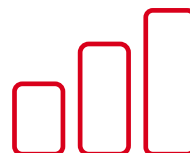

Save & Compare Surveys
Keep a record of the ideal installation location by saving & uploading survey & live monitor results